

Busranger VKS Whip Frequencies

Frequencies	Station	Tap
14977	VKS 4	13
11612	VKS 3	12
10180	VKS 7	11
8022	VKS 2	10
6965 6960 6945	RFDS Mt Isa Secondary RFDS Port Hedland Secondary RFDS Derby Secondary	9
6920 6890 6880	RFDS Broken Hill Secondary RFDS Port Augusta Secondary RFDS Meekatharra Secondary	8
6845 6796	RFDS Charleville VKS 6	7
5455	VKS 1	6
5360 5300	RFDS Carnarvon Primary RFDS Meekatharra Primary RFDS Port Hedland Primary RFDS Derby Primary	5
5145 5110	RFDS Cairns Primary RFDS Mt Isa Primary	4
4980	RFDS Charleville Primary	3
4055 4045 4030	RFDS Broken Hill Primary RFDS Carnarvon Secondary RFDS Port Hedland Secondary	2
4010 3995	RFDS Port Augusta Primary VKS 5	1

This sheet lists the frequencies that the taps are tuned to on the Bushcomm Bushranger VKS whip. Tap 1 is the bottom tap on the whip.

To select a particular frequency plug one end of the wander lead into the relevant tap, wrap the lead around the whip then plug the other end into the bottom tap. If you want to tune to the lowest frequency then remove the wander lead altogether, but remember to store it in a safe place for later use.