

Adventurer 16 Whip Frequencies

Frequency	Station	Tap
15972	VKE 63	16
14977	VKS 4	15
14662	VKE 55	
12197	VKE 62	14
11612	VKS 3	13
11487	VKE 54	
10180	VKS 7	12
8022	VKS 2	11
7899	VKE 56	10
6965	RFDS Mt Isa	9
6960	RFDS Port Hedland	
6920	RFDS Broken Hill	
6845	RFDS Charleville	8
6796	VKS 6	
6790	VKE 60	
5455	VKS 1	7
5360	RFDS Carnarvon	6
5300	RFDS Derby	
5145	RFDS Cairns	5
5135	VKE 52	
5110	RFDS Mt Isa	
4980	RFDS Charleville	4
4055	RFDS Broken Hill	3
4045	RFDS Carnarvon	
4030	RFDS Port Hedland	
4010	RFDS Port Augusta	2
3995	VKS 5	
3890.5	VKE 50	1

Suitable for Bushcomm part number BU00955.

This sheet lists the tuned frequencies of the taps on the Bushcomm **Adventurer 16** multitap HF antenna. Tap 1 is the bottom tap on the whip.

To select a particular frequency plug one end of the wander lead into the relevant tap, wrap the lead around the whip then plug the other end into the bottom tap. If you want to tune to the lowest frequency then remove the wander lead altogether, but remember to store it in a safe place for later use.

A Quality product

Made in AUSTRALIA