

## Bushranger VKS and 27MHz CB Whip Frequencies

Frequencies	Station	Tap
27145	<b>27 MHz CB</b>	8
14977	<b>VKS 4</b>	7
11612	<b>VKS 3</b>	6
10180	<b>VKS 7</b>	5
8022	<b>VKS 2</b>	4
6845 6796	RFDS Charleville <b>VKS 6</b>	3
5455	<b>VKS 1</b>	2
4010 3995	RFDS Port Augusta Primary <b>VKS 5</b>	1

*(VKS channels and 27MHz CB)*

*Bushcomm Part # BU00930*

This sheet lists the frequencies that the taps are tuned to on the Bushcomm Bushranger VKS whip. Tap 1 is the bottom tap on the whip.

To select a particular frequency plug one end of the wander lead into the relevant tap, wrap the lead around the whip then plug the other end into the bottom tap. If you want to tune to the lowest frequency then remove the wander lead altogether, but remember to store it in a safe place for later use.

*A Quality product*

**MADE in AUSTRALIA**